

Shell - Seat Back - Driver (Remove and Replace)



Correction code 13041002
FRT 0.10

NOTE: Unless otherwise explicitly stated in the procedure, the above correction code and FRT reflect all of the work required to perform this procedure, including the linked procedures. **Do not stack correction codes unless explicitly told to do so.**

NOTE: See [Flat Rate Times](#) to learn more about FRTs and how they are created. To provide feedback on FRT values, email LaborTimeFeedback@tesla.com.

NOTE: See [Personal Protection](#) to make sure wearing proper PPE when performing the below procedure.


Warning
Seat base edges are sharp and can cause personal injury. Wear cut resistant gloves when removing the seat from the vehicle, and while performing procedures that involve work on or near the seat base.

Remove


1. Remove the driver headrest trim from the seat. See [Trim - Headrest - Driver \(Remove and Replace\)](#) .



2. Release the clips that attach the seat back shell to the driver seat, lift up on the shell to unhook it from the seat back frame, and lay the shell back.

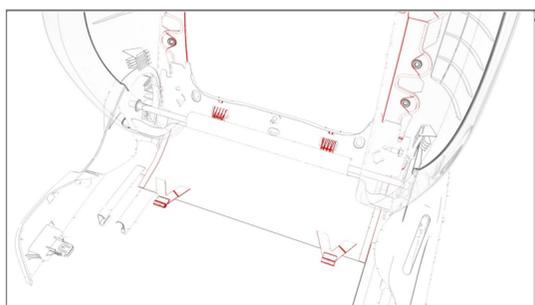

3. Release the clips that attach the shell apron to the underside of the seat, and then remove the shell from the seat.

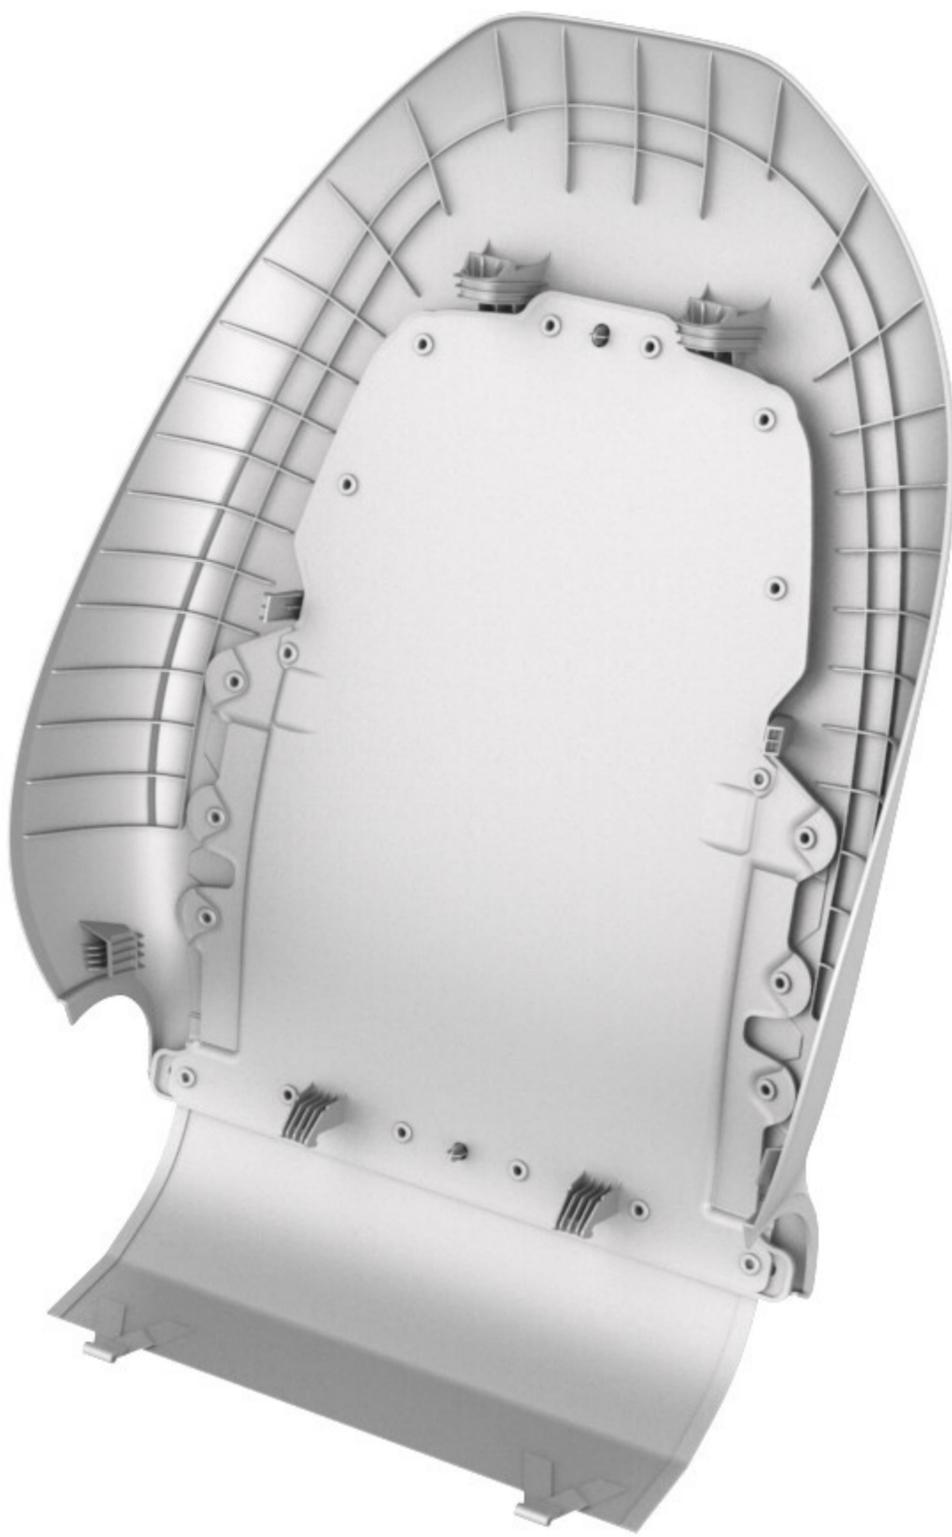

Install

Installation procedure is the reverse of removal.